

ThinkGear Connector User Guide

Introduction

ThinkGear™ Connector is a program that runs in the background of your computer, allowing special games and applications to adapt to your state of mind as detected by NeuroSky's ThinkGear sensor. No configuration is required – just pair your headset with your computer, launch ThinkGear Connector, and start using TGC-enabled applications!

Installation

ThinkGear Connector is automatically installed when you install the MindWave™ or MindWave Mobile™ Installer Disc. If necessary, the installer will install other necessary application to fully setup ThinkGear Connector.

ThinkGear Connector by itself can be installed from the links below.

Windows (XP, Vista, 7)	TGC Windows (requires .NET Framework 3.5)
Mac OS X	TGC Mac (requires MonoFramework)

Using the Connector

Windows XP/Vista/7

Starting the Connector

Before starting up ThinkGear Connector, make sure to pair your headset with your computer. For pairing instructions, refer to the documentation that came with your headset.

ThinkGear Connector can be run from the **Start** menu, by navigating to **Programs, NeuroSky MindWave** (or **MindWave Mobile**), **Utilities**, and then clicking on the **ThinkGear Connector** icon. When the ThinkGear Connector is running, an icon will appear in the System Tray. This is the default state of ThinkGear Connector.



Running TGC-Enabled Applications

When a ThinkGear Connector-enabled application tries to connect, ThinkGear Connector will **automatically** search for and connect to the paired headset. While ThinkGear Connector is searching for the headset, an hourglass icon will be shown in the System Tray.



If the search was successful and ThinkGear Connector was able to connect to a headset, a notification bubble will appear, and the System Tray icon will change to a bright-blue “brain” icon.



However, if the search was unsuccessful, ThinkGear Connector will display a notification bubble stating the error, and the System Tray icon will change to a red exclamation.



In order to reattempt a connection to a headset through ThinkGear Connector, click on the notification bubble and click the “Retry headset connection” item in the right-click menu. Or click the appropriate button in the Preferences panel.

If ThinkGear Connector was unable to connect to a headset, please ensure the following:

- The headset's battery has enough charge and is turned on
- The headset is paired with your computer

If you are still having problems connecting to the headset, refer to the documentation that came with your headset.

Mac OS X

Starting the Connector

Before starting up ThinkGear Connector, make sure to pair your headset with your computer. For pairing instructions, refer to the documentation that came with your headset.

ThinkGear Connector can be run from the **Applications** folder, by navigating to your headset's folder (ie. **MindWave_Mobile_core**), **Utilities**, and then clicking on the **ThinkGear Connector** icon. When ThinkGear Connector is running, an icon will appear in the Menu Bar. This is the default state of ThinkGear Connector.



Running TGC-Enabled Applications

When a ThinkGear Connector-enabled application tries to connect, ThinkGear Connector will **automatically** search for and connect to the paired headset. While ThinkGear Connector is searching for the headset, an hourglass icon will be shown in the System Tray.



If the search was successful and ThinkGear Connector was able to connect to a headset, a notification bubble will appear, and the System Tray icon will change to a bright-blue “brain” icon.



However, if the search was unsuccessful, ThinkGear Connector will display a notification bubble stating the error, and the System Tray icon will change to a red exclamation.



To ask the ThinkGear Connector to try to connect to a headset again, you can click on the notification bubble, click the “Retry headset connection” item in the right-click menu, or click the appropriate button in the Preferences panel.

If ThinkGear Connector was unable to connect to a headset, please ensure the following:

- The headset's battery has enough charge and is turned on
- The headset is paired with your computer



If you are still having problems connecting to the headset, refer to the documentation that came with your headset.

Configuration

System Tray

By right-clicking on the System Tray icon, you can review the status of ThinkGear Connector, as well



as perform additional actions as described in following table.

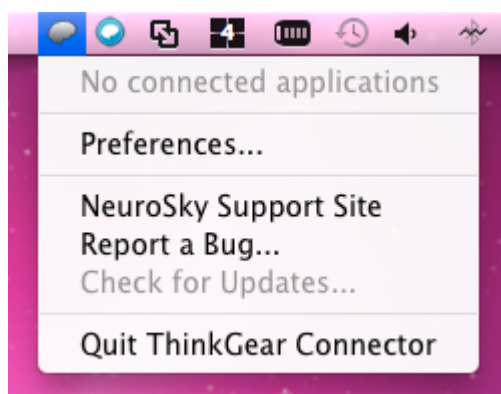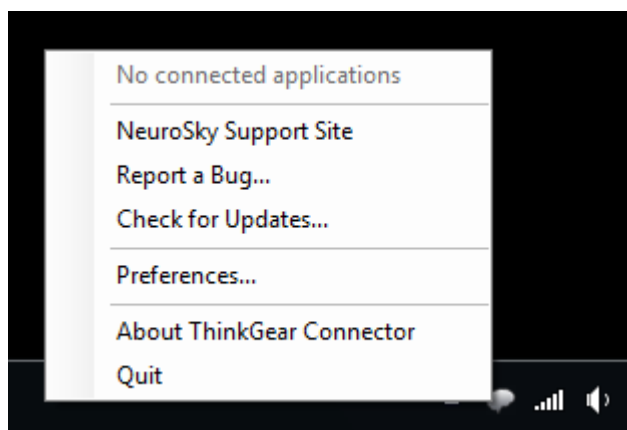

Item	Description
Status	Display the number of applications connected to ThinkGear Connector (figure shows no active connection)
Retry headset connection	Attempt to connect to the headset again. This only shows up when there was a failed connection attempt.
NeuroSky Support Site	Open a browser window to the NeuroSky support site
Report a Bug...	Open up your e-mail client to report a bug to NeuroSky
Check for Updates...	Checks online and notifies the user of any updates to the ThinkGear Connector.
Preferences...	Open up the Preferences panel
About ThinkGear Connector	Open up a panel showing miscellaneous information about ThinkGear Connector (e.g. version numbers)
Quit	Quit ThinkGear Connector

Preferences Panel

By opening the Preferences panel, you can configure operating and startup options.

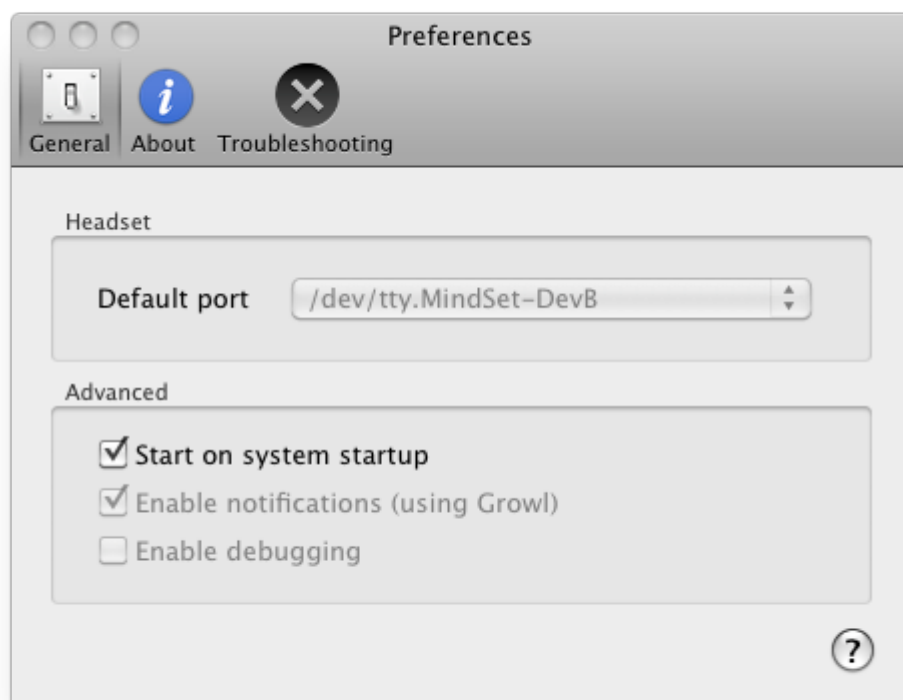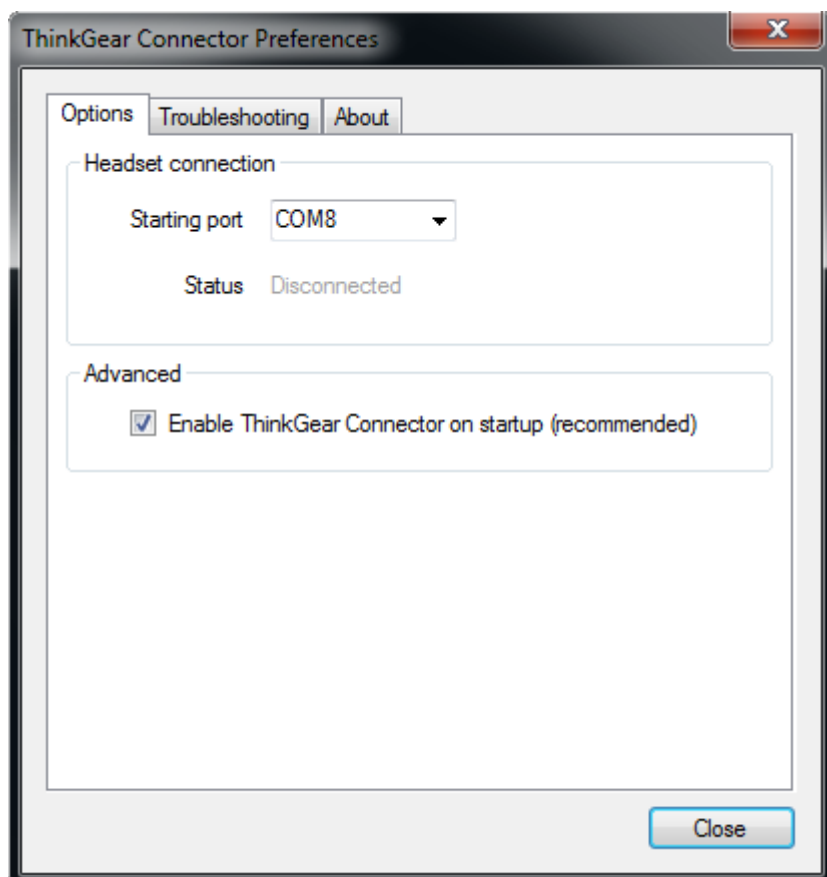

Item	Description
Starting port	Specifies the default serial port searched by ThinkGear Connector
Status	Show the status of the headset connection
Enable ThinkGear Connector on startup	If checked, ThinkGear Connector will also be started when Windows starts up

Troubleshooting

ThinkGear Connector doesn't seem to be able to connect to my headset

Check that the headset is turned on and paired to your computer, then retry the connection attempt by either clicking on the error notification balloon or by clicking *Retry connection* in the Preferences panel. If that doesn't work, re-pair the headset, then restart ThinkGear Connector.

ThinkGear Connector won't start properly, because it wasn't able to listen on the desired port.

If you see an error message trying to initialize and start ThinkGear Connector, restart your computer and try starting ThinkGear Connector again.

From:

<http://developer.neurosky.com/docs/> - **NeuroSky Developer - Docs**

Permanent link:

http://developer.neurosky.com/docs/doku.php?id=thinkgear_connector_user_guide

Last update: **2014/06/18 23:30**



Warnings and Disclaimer of Liability

THE ALGORITHMS MUST NOT BE USED FOR ANY ILLEGAL USE, OR AS COMPONENTS IN LIFE SUPPORT OR SAFETY DEVICES OR SYSTEMS, OR MILITARY OR NUCLEAR APPLICATIONS, OR FOR ANY OTHER APPLICATION IN WHICH THE FAILURE OF THE ALGORITHMS COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR. YOUR USE OF THE SOFTWARE DEVELOPMENT KIT, THE ALGORITHMS AND ANY OTHER NEUROSKY PRODUCTS OR SERVICES IS "AS-IS," AND NEUROSKY DOES NOT MAKE, AND HEREBY DISCLAIMS, ANY AND ALL OTHER EXPRESS AND IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND ANY WARRANTIES ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL NEUROSKY BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS OR INCOME, WHETHER OR NOT NEUROSKY HAD KNOWLEDGE, THAT SUCH DAMAGES MIGHT BE INCURRED.